



**MOTOROLA**  
*intelligence everywhere™*



# **ASTRO® XTS™ 2500**

## Digital Portable Radio

Model II  
User Guide



# ASTRO® XTS™ 2500

## Digital Portable Radio, Model II

### Quick Reference Card


#### Product Safety and RF Exposure Compliance



Before using this product, read the operating instructions for safe usage contained in the Product Safety and RF Exposure booklet enclosed with your radio.

#### ATTENTION!

This radio is restricted to occupational use only to satisfy FCC RF energy exposure requirements. Before using this product, read the RF energy awareness information and operating instructions in the Product Safety and RF Exposure booklet enclosed with your radio (Motorola Publication part number 6881095C98) to ensure compliance with RF energy exposure limits.

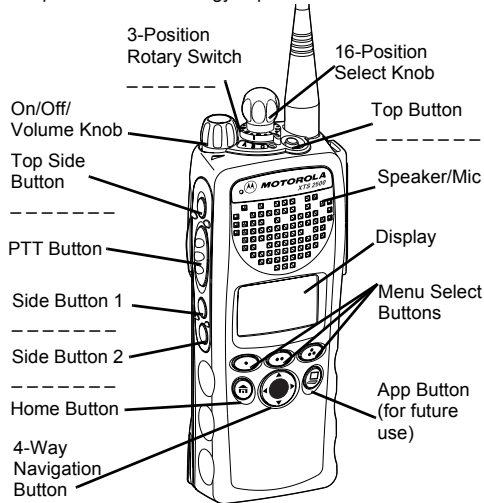

Write your radio's programmed features on the dotted lines.

#### Select a Zone Using the Menu

- 1 Press until
- 2 Press , , or directly below ZONE.
- 3 Press until the zone you desire is shown.
- 4 Press to confirm, or press **PTT** to transmit.

#### Select a Channel

##### Method 1: Using the Select Knob

After selecting the desired zone, turn the 16-position Select Knob to the desired channel.

##### Method 2: Using the Menu

- 1 Press until
- 2 Press , , or directly below CHAN.
- 3 Press until channel you desire is shown.
- 4 Press to confirm, or press **PTT** to transmit.

#### Send an Emergency Alarm

- 1 Radio on and press **Emergency** button. You see red LED; you hear short, medium-pitched tone.
- 2 Display shows
- 3 When acknowledgment is received, you hear four tones; alarm ends; radio exits emergency.

#### Send Silent Emergency Alarm

- 1 Radio on and press **Emergency** button. You see no LED; you hear no tone.
- 2 Press **PTT**.
- 3 Alarm continues until you exit by:
  - Press and hold **Emergency** button for one second**OR**
  - Press **PTT** again.

#### Answer a Phone Call

- 1 Phone-like ringing, LED flashes GREEN, PHONE CALL and are displayed
- 2 Press **Call Response** button.
- 3 Press **PTT** button to talk; release to listen
- 4 Press to hang up.

#### Send a Phone Call

- 1 Press until
- 2 Press , , or directly below PHON.
- 3 Press or to scroll to phone number.
- 4 Press **PTT** (or **Quick Access** button, if programmed) to talk, release to listen.

## Display Status Symbols

	<b>Call Received.</b> Receiving an individual call
	<b>View/Program Mode.</b> The radio is in the view or program mode; <b>On Steady</b> = view mode; <b>Flashing</b> = program mode
	<b>Received Signal Strength Indication (RSSI).</b> Received signal strength for the current site (trunking only). The more stripes in the symbol, the stronger the signal.
	<p><b>Battery</b></p> <ul style="list-style-type: none"> <li>Conventional = Flashes when the battery is low.</li> <li>Smart = The number of bars (0-3) shown indicates the charge remaining in your battery.</li> </ul> <p>Note: Smart battery will be available at a future date.</p>
	<b>Talkaround.</b> You are talking directly to another radio or through a repeater; <b>On</b> = direct; <b>Off</b> = repeater
	<b>Monitor (Carrier Squelch).</b> This channel is being monitored.
	<b>Scan.</b> The radio is scanning a scan list


## Menu Entries (Use With Menu Navigation)

Entry	Menu Selection	Page
BATT	Smart Battery*	15
CALL	Private Call	48
CHAN	Select a Channel	22
CLOCK	Edit Time and Date	62
DIR	Repeater/Direct	52
PAGE	Call Alert Page	50
PHON	Phone	43

Entry	Menu Selection	Page
PWR	TX Power Level	29
RPGM	Reprogram Request	55
SCAN	Scan On/Off	39
SITE	Site Lock	59
TGRP	Talkgroup Call	51
VIEW	Viewing a List	37
ZONE	Select a Zone	21

\*Available at a future date.

## Menu Navigation

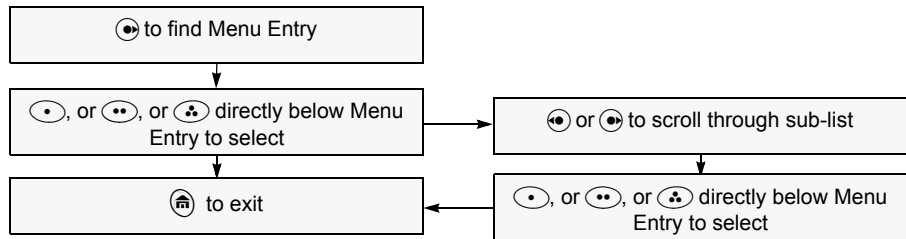



**MOTOROLA**  
*intelligence everywhere™*

**ASTRO® XTS™ 2500**  
**Digital Portable Radio**  
**Model II**

**User Guide**

**6881094C05-D**

MOTOROLA, the Stylized M Logo, ASTRO, and CommPort are registered in the U.S. Patent & Trademark Office. All other product or service names are the property of their respective owners.

P25 radios contain technology patented by Digital Voice Systems, Inc.  
© Motorola, Inc. 2004. All Rights Reserved. Printed in the U.S.A. 10/4/04.

Motorola, Inc.  
8000 W. Sunrise Blvd.  
Ft. Lauderdale, FL 33322

This declaration is applicable to your radio *only* if your radio is labeled with the FCC logo shown below.

## DECLARATION OF CONFORMITY

Per FCC CFR 47 Part 2 Section 2.1077(a)



Responsible Party  
Name: Motorola, Inc.

Address: 8000 West Sunrise Boulevard  
Plantation, FL 33322 USA  
Phone Number: 1-888-567-7347

Hereby declares that the product:

Model Name: **XTS 2500**

conforms to the following regulations:

FCC Part 15, subpart B, section 15.107(a), 15.107(d) and section 15.109(a)

### **Class B Digital Device**

As a personal computer peripheral, this device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

1. this device may not cause harmful interference, and
2. this device must accept any interference received, including interference that may cause undesired operation.

**Note:** This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

**If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:**

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

## Product Safety and RF Exposure Compliance



**Before using this product, read the operating instructions for safe usage contained in the Product Safety and RF Exposure booklet enclosed with your radio.**

### **ATTENTION!**

**This radio is restricted to occupational use only to satisfy FCC RF energy exposure requirements. Before using this product, read the RF energy awareness information and operating instructions in the Product Safety and RF Exposure booklet enclosed with your radio (Motorola Publication part number 6881095C98) to ensure compliance with RF energy exposure limits.**

For a list of Motorola-approved antennas, batteries, and other accessories, visit the following web site which lists approved accessories: <http://www.motorola.com/cgiss/index.shtml>

### **Computer Software Copyrights**

The Motorola products described in this manual may include copyrighted Motorola computer programs stored in semiconductor memories or other media. Laws in the United States and other countries preserve for Motorola certain exclusive rights for copyrighted computer programs, including, but not limited to, the exclusive right to copy or reproduce in any form the copyrighted computer program. Accordingly, any copyrighted Motorola computer programs contained in the Motorola products described in this manual may not be copied, reproduced, modified, reverse-engineered, or distributed in any manner without the express written permission of Motorola. Furthermore, the purchase of Motorola products shall not be deemed to grant either directly or by implication, estoppel, or otherwise, any license under the copyrights, patents or patent applications of Motorola, except for the normal non-exclusive license to use that arises by operation of law in the sale of a product.

## **Documentation Copyrights**

No duplication or distribution of this document or any portion thereof shall take place without the express written permission of Motorola. No part of this manual may be reproduced, distributed, or transmitted in any form or by any means, electronic or mechanical, for any purpose without the express written permission of Motorola.

## **Disclaimer**

The information in this document is carefully examined, and is believed to be entirely reliable. However, no responsibility is assumed for inaccuracies. Furthermore, Motorola reserves the right to make changes to any products herein to improve readability, function, or design. Motorola does not assume any liability arising out of the applications or use of any product or circuit described herein; nor does it cover any license under its patent rights, nor the rights of others.



# Contents

---

- Declaration of Conformity ..... ii
- Product Safety and RF Exposure Compliance ..... iii
- Computer Software Copyrights ..... iii
- Documentation Copyrights ..... iv
- Disclaimer ..... iv
  
- General Radio Operation ..... 1**
- Notations Used in This Manual ..... 1
- XTS 2500 Model II Radio ..... 2
- Physical Features of the XTS 2500 Model II Radio ..... 3
- Programmable Features ..... 4
- Display ..... 5
- Backlight ..... 5
- Status Symbols ..... 6
- Menu Entry (Softkey) ..... 7
- Menu Select Buttons ..... 7
  - Menu Entry Features ..... 8
- Home Button (Ⓜ) ..... 9
- App Button (Ⓜ) ..... 9
- 4-Way Navigation Button (Ⓜ) ..... 9
- LED Indicators ..... 9
- Alert Tones ..... 10
- Standard Accessories ..... 13
  - Battery ..... 13
    - Smart Battery Condition ..... 15
  - Antenna ..... 16
  - Belt Clip ..... 17
- Remove the Belt Clip ..... 17
- Universal Connector Cover ..... 18
- Remote Speaker Microphone Adapter ..... 19
- Radio On and Off ..... 20
  - Turn the Radio On ..... 20
  - Turn the Radio Off ..... 20
- Zones and Channels ..... 21
  - Select a Zone ..... 21
  - Select a Channel ..... 22
- Receive / Transmit ..... 24
  - Without Using the Volume Set and Monitor Buttons ..... 24
  - Use Preprogrammed Volume Set Button ..... 25
  - Use the Preprogrammed Monitor Button ..... 26

---

Conventional Mode Operation .....	27
<b>Common Radio Features .....</b>	<b>29</b>
Selectable Power Level .....	29
Use the Menu .....	29
Conventional Squelch Options .....	30
Analog Squelch .....	30
Digital Squelch .....	31
PL Defeat .....	31
Time-out Timer .....	32
Emergency .....	33
Send an Emergency Alarm .....	33
Send an Emergency Call .....	34
Send a Silent Emergency Alarm .....	35
Emergency Keep-Alive .....	36
Lists .....	37
View a List .....	37
Scan List Empty .....	38
Scan .....	39
Turn Scan On and Off .....	39
Delete a Nuisance Channel .....	41
Conventional Scan Only .....	42
Telephone Calls (Trunking Only) .....	43
Answer a Phone Call .....	43
Phone Call Display and Alert Prompts .....	45
Private Calls (Trunking Only) .....	47
Answer a Private Call .....	47
Make a Private Call .....	48
Call Alert Paging .....	49
<b>Answer a Call Alert Page</b> .....	<b>49</b>
Make a Call Alert .....	50
Conventional Talkgroup Calls (Conventional Operation Only) .....	51
Select a Talkgroup .....	51
Repeater or Direct Operation .....	52
Select Repeater or Direct Operation .....	52
<b>Special Radio Features .....</b>	<b>53</b>
PTT ID .....	53
Receive .....	53

---

Transmit .....	53
View Your Radio's ID Number .....	54
Dynamic Regrouping (Trunking Only) .....	55
Reprogram Request (ASTRO 25 Trunking Only) .....	55
Select Enable / Disable .....	57
Trunking System Controls .....	58
Failsoft .....	58
Out-of-Range .....	58
Site Lock .....	59
Site Trunking .....	60
Site View and Change .....	60
Time and Date .....	62
Edit Time and Date .....	62
<b>Helpful Tips .....</b>	<b>65</b>
Radio Care .....	65
Cleaning .....	65
Handling .....	65
Service .....	65
Battery .....	66
Battery Life .....	66
Charging the Battery .....	66
Battery Recycling and Disposal .....	68
Antenna .....	69
Radio Operating Frequencies .....	69
<b>Accessories .....</b>	<b>71</b>
Antennas .....	71
Batteries .....	71
Carry Accessories .....	72
Belt Clips .....	72
Body-Worn .....	72
Chargers .....	72
Enhanced and Multi-Unit Line Cords .....	73
Microphones, Remote Speaker .....	73
Surveillance Accessories .....	74
Adapters and Adapter Cable .....	74
CommPort® Integrated Microphone/Receivers .....	74
Earpieces .....	74
Headsets and Headset Accessories .....	75

---

Radio Interface Modules for Ear Microphones .....	76
Switches .....	76

**Appendix: Maritime Radio Use in the VHF Frequency Range .....** **77**

Special Channel Assignments .....	77
Emergency Channel .....	77
Non-Commercial Call Channel .....	78
Operating Frequency Requirements .....	78

**Glossary .....** **81**

**Commercial Warranty.....** **85**

**Index .....** **91**

**Table 1: Channel Map**

Use the chart below to map the channels (Cx) and zones (Zx) for your radio.

	Z1	Z2	Z3	Z4	Z5	Z6
C1						
C2						
C3						
C4						
C5						
C6						
C7						
C8						
C9						
C10						
C11						
C12						
C13						
C14						
C15						
C16						

## Notes

---

# General Radio Operation

---

## Notations Used in This Manual

You will notice the use of **WARNINGS**, **CAUTIONS**, and **Notes** throughout this manual. These notations are used to emphasize that safety hazards exist and that care must be taken or observed.



**WARNING**

**WARNING:** An operational procedure, practice, condition, etc. exists which may result in injury or death if not carefully observed.


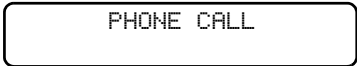



**Caution**


**CAUTION:** An operational procedure, practice, condition, etc. exists which may result in damage to the equipment if not carefully observed.

**Note:** A **Note** is an operational procedure, practice, or condition, etc. which is essential to emphasize.

The following special notations identify certain items:

<b>Example</b>	<b>Description</b>
Light button, or 	Buttons and keys are shown in <b>bold</b> print, or as representative symbols.
	Information appearing in the radio's display is shown using the special display font.
PHONE	Menu entries are shown similar to the way they appear in the radio's display.
Press 	This means "Press the right side of the <b>4-Way Navigation Button</b> ."

# XTS 2500 Model II Radio

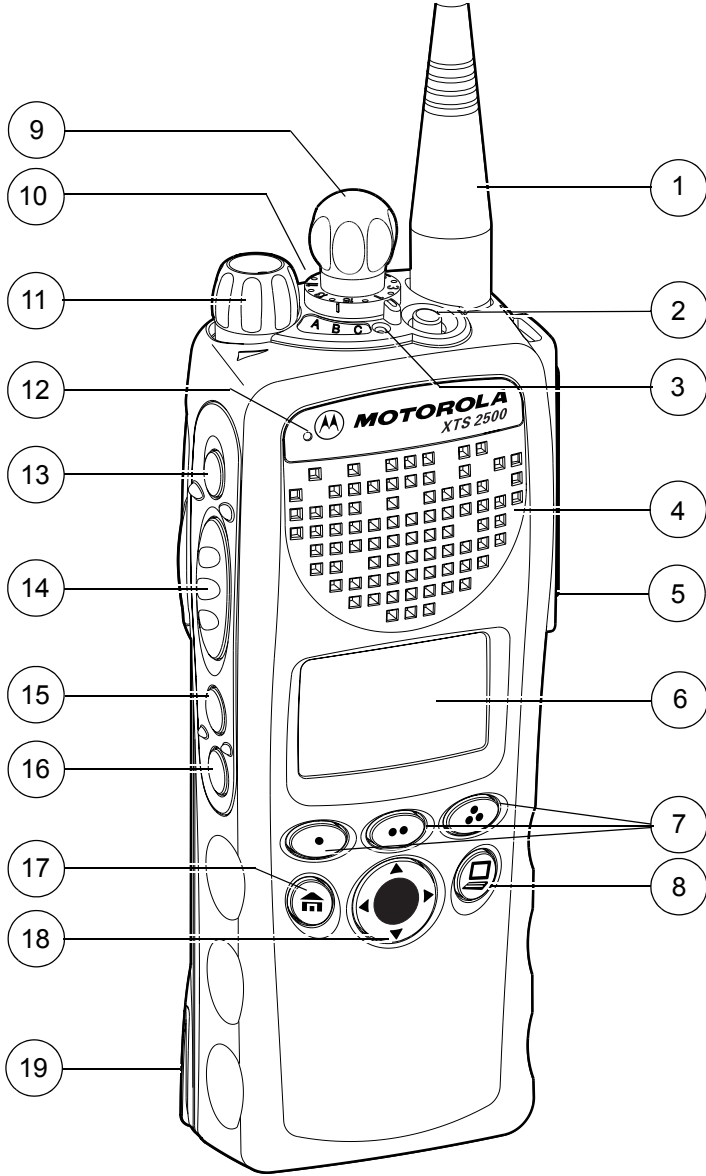



## Physical Features of the XTS 2500 Model II Radio

<i>Item</i>	<i>Page</i>	<i>Item</i>	<i>Page</i>
<b>1</b> Antenna	16	<b>11 On/Off/Volume Control Knob</b>	20
<b>2 Top Button</b> (programmable)		<b>12 Microphone</b>	
<b>3 LED</b>	9	<b>13 Top Side (Select) Button</b> (programmable)	
<b>4 Speaker</b>		<b>14 Push-to-Talk (PTT) Button</b>	
<b>5 Universal Connector</b>	18	<b>15 Side Button 1</b> (programmable)	
<b>6 Display</b>	5	<b>16 Side Button 2</b> (programmable)	
<b>7 Menu Select Buttons</b>	7	<b>17 Home button</b>	9
<b>8 App Button</b> (for future use)	9	<b>18 4-Way Navigation Button</b>	9
<b>9 16-Position Knob</b> (programmable)		<b>19 Battery</b>	13
<b>10 3-Position Concentric Switch</b> (programmable)			

## Programmable Features

The programmable controls on your radio can be programmed by a qualified technician to operate certain software-activated features. The features that can be assigned to these controls, and the page numbers where these features can be found, are listed below.


**Table 2: Programmable Features**

<i>Feature</i>	<i>Page</i>	<i>Feature</i>	<i>Page</i>
Call Alert Page	50	Private Call	47
Call Response	43	Repeater/Direct	52
Channel Selection	22	Reprogram Request	55
Dynamic Priority	42	Scan On/Off	39
Emergency	33	Site Lock/Unlock	59
Light	5	Site Search	59
Monitor	26	Smart Battery*	15
Nuisance Delete	41	Transmit Power Level	29
Phone	43	Volume Set	25
PL Defeat	31	Zone Selection	21

\*Will be available at a future date.

**Any references in this manual to controls that are “preprogrammed” means that a qualified technician must use the radio’s programming software to assign a feature to a control.**

## Display

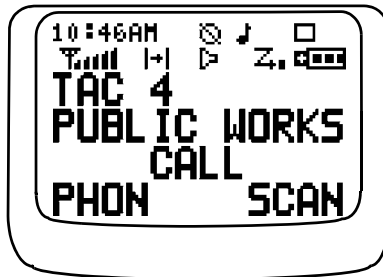

This figure is typical of what you see on your radio. The 64 x 96 pixel liquid crystal display (LCD) shows radio status, text, and menu entries.

## Backlight








If poor light conditions make the display difficult to read, turn on the radio's backlight by pressing the **Light** button.

The light will remain on for a preprogrammed time before it turns off automatically, or you can turn it off immediately by pressing the **Light** button again.

## Status Symbols

The top two rows in the display contain symbols indicating the radio's status.

**Table 3: Status Symbols**


<i>Symbol</i>	<i>Indication</i>	<i>Page</i>
	<b>Call Received.</b> Flashes when an Individual Call is received.	43
	<b>View/Program Mode.</b> <ul style="list-style-type: none"> <li>View a list (steady)</li> <li>Program a list (flashing)</li> </ul>	37
	<b>Received Signal Strength Indication (RSSI).</b> The received signal strength for the current site. Trunked only. The more stripes in the symbol, the stronger the received signal.	60
	<b>Battery</b> <ul style="list-style-type: none"> <li>Conventional = Flashes when the battery is low.</li> <li>Smart = The number of bars (0-3) shown indicates the charge remaining in your battery. Flashes when battery level reaches 10% or less.</li> </ul> <p><b>Note:</b> Smart battery will be available at a future date.</p>	13
	<b>Talkaround.</b> <ul style="list-style-type: none"> <li>On = Talking directly to another radio, not through a repeater. Conventional operation only.</li> <li>Off = Talking through a repeater.</li> </ul>	52
	<b>Monitor (Carrier Squelch).</b> The selected channel is being monitored. Conventional operation only.	26
	<b>Scan.</b> The radio is scanning a scan list.	39

## Menu Entry (Softkey)

The bottom row of the display contains one to three menu entries (also known as softkeys). The menu entries allow you to select from one of several menus to access the radio's features. The menu entries are accessed using the **Menu Select** buttons.

## Menu Select Buttons


The Menu Select buttons access the menu entries of features that have been activated by a qualified radio technician. Your radio may be programmed differently from the following example, but the display for selecting Scan on or off might look like this:

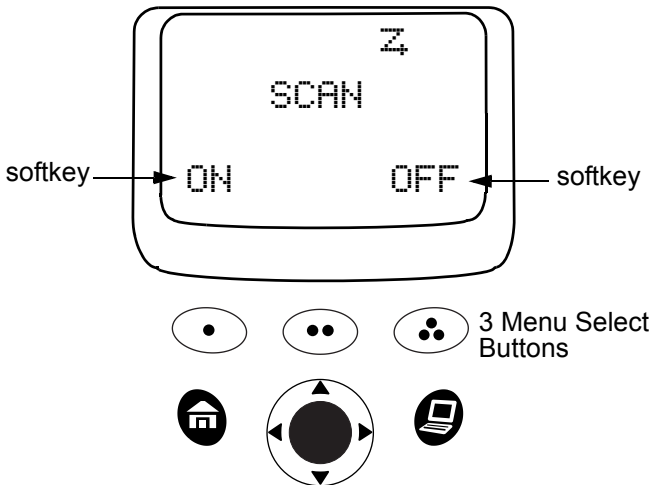


Example: To turn scan on:

Press .

The display shows the selected state.

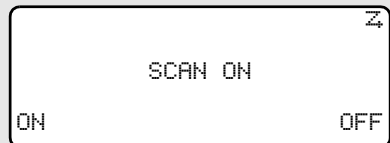

## Menu Entry Features

In most cases, press  to display the following feature selections.

**Table 4: Menu Entry Features**

<i>Feature</i>	<i>Menu Selection</i>	<i>Page</i>
Call Alert Page	PAGE	50
Channel Selection	CHAN	22
Phone	PHON	43
Private Call	CALL	47
Repeater/Direct	DIR	52
Reprogram Request	RPGM	55
Scan On/Off	SCAN	39
Site Lock/Unlock	SITE	59
Site Search	SCANNING SITE	60
Smart Battery*	BATT	15
Talkgroup Call	TGRP	51
Time/Date	CLCK	62
Transmit Power Level	PWR	29
View a List	VIEW	37
Zone Selection	ZONE	21

\*Available at a future date.

## Home Button (🏠)

The **Home** button will always return you to the home (default) display. In most cases, this is the current mode.

Some radio features require saving information in memory. Pressing the **Home** button while using those features will cause information to be saved before going to the home display.

Some features do not require you to press the **Home** button to go to the home display. This reduces the required number of button presses.

## App Button (📄)

Reserved for future use.

## 4-Way Navigation Button (⬅️➡️)

This button is used to scroll through the radio's lists or items in the display.

## LED Indicators

**Table 5: LED Indicators**

<i><b>This LED Color:</b></i>	<i><b>indicates:</b></i>
RED (Non-flashing)	Transmitting
RED (Flashing)	<ul style="list-style-type: none"> <li>• Channel Busy</li> </ul> OR <ul style="list-style-type: none"> <li>• Low Battery (lights while transmitting)</li> </ul>
GREEN (Flashing)	Receiving Individual Call

## Alert Tones

Your radio uses alert tones to inform you of radio conditions.

**Table 6: Alert Tones**

<b><i>You hear:</i></b>	<b><i>Tone Name</i></b>	<b><i>Heard:</i></b>
<b><i>Short, Low-Pitched Tone</i></b>	Invalid Button-Press	when the wrong key is pressed.
	Radio Self-Test Failed	when the radio fails the power-up self test.
	No ACK Received	when the radio does not receive an acknowledgment.
	Reject	when an unauthorized request is made.
	Time-Out Timer Warning	four seconds before time out.
<b><i>Long, Low-Pitched Tone</i></b>	Time-Out Timer Timed Out	after time out.
	Talk Prohibit/PTT Inhibit	when the PTT button is pressed, and transmissions are prevented.
	Out-of-Range	when the PTT button is pressed, but the radio is out of range of the system.
	Invalid Mode	when the radio is set to an unprogrammed channel.
	Individual Call Warning Tone	when the radio is in Individual Call without any activity for more than 6 seconds.
<b><i>A Group of Low-Pitched Tones (Busy Tone)</i></b>	Busy	when the system is busy.



**Table 6: Alert Tones (Continued)**

<b>You hear:</b>	<b>Tone Name</b>	<b>Heard:</b>
<i>Short, Medium- Pitched Tone</i>	Valid Key-Press	when the correct key is pressed.
	Radio Self-Test Pass	when the radio passes its power-up self-test.
	Priority Channel Received	when activity on a priority channel is received.
	Emergency Alarm Entry	when entering the emergency state.
	Central Echo	when the central controller has received a request from a radio.
<i>Long, Medium- Pitched Tone</i>	Volume Set	when volume changed on a quiet channel.
	Emergency Exit	upon exiting the emergency state.
<i>A Group of Medium- Pitched Tones</i>	Failsoft	when the trunking system fails.
	Automatic Call Back	when the voice channel is available from the previous request.
	Talk Permit	(When pressing the PTT button) verifies the system is accepting transmissions.
	Console Acknowledge	when a status, emergency alarm, or reprogram request acknowledgment is received.
	Received Individual Call	when a Call Alert, or Private Conversation Call is received.
	Call Alert Sent	when a Call Alert is received by the target radio.
<i>Short, High- Pitched Tone (Chirp)</i>	Low-Battery Chirp	when the battery is below the preset threshold value.

**Table 6: Alert Tones (Continued)**

<b><i>You hear:</i></b>	<b><i>Tone Name</i></b>	<b><i>Heard:</i></b>
<i>Ring</i>	Fast Ringing	when the system is searching for the Private Conversation Call target radio.
	Enhanced Call Sent	when waiting for the Private Conversation Call target radio to respond to the call.
	Phone Call Received	when a landline phone call is received.
<i>Gurgle</i>	Dynamic Regrouping	when the PTT button is pressed, a dynamic ID has been received.

## Standard Accessories

### Battery



To avoid a possible explosion:

- **DO NOT** replace the battery in any area labeled “hazardous atmosphere”.
- **DO NOT** discard batteries in a fire.

#### **Charge the Battery**

The Motorola approved battery shipped with your radio is uncharged. Prior to using a new battery, charge it for a minimum of 16 hours to ensure optimum capacity and performance.

For a list of Motorola-authorized batteries available for use with your XTS 2500 radio, see “Batteries” on page 71.


**Note:** When charging a battery attached to a radio, turn the radio off to ensure a full charge.

#### **Battery Charger**


To charge the battery, place the battery, with or without the radio, in a Motorola-approved charger. The charger’s LED indicates the charging progress; see your charger’s user guide. For a list of chargers, see “Chargers” on page 72.

### Attach the Battery

- 1 With the radio off, fit the three extensions at the bottom of the battery into the bottom slots on the radio.

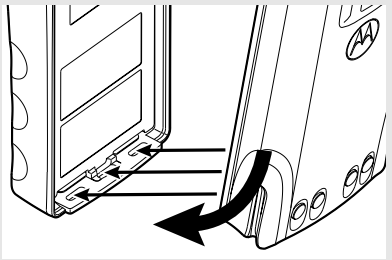


- 2 Press the top of the battery against the radio until both latches click into place.

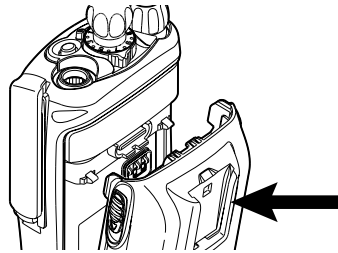


---

### Remove the Battery

- 1 With the radio off, slide down the latches on the sides of the battery.

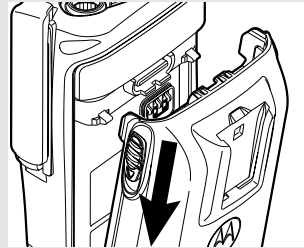

- 2 Pull the top of the battery away from the radio.

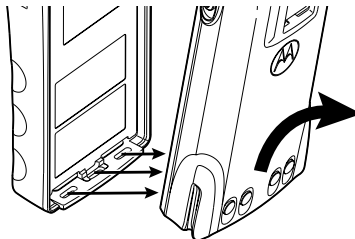

## Smart Battery Condition

This feature lets you view the condition of your Smart Battery when it becomes available.

### Use the Menu

- 1 Press  to find BATT.


BATT

- 2 Press , , or  directly below BATT.

CAPACITY	70%
INIT	10/01
EST CHGS	11

**Note:** If a Smart Battery is not powering your radio:

SMART BATT  
DATA NOT  
AVAILABLE

- 3 Press  to exit.


### Use the Preprogrammed Smart Battery Button

- 1 Press the **Smart Battery** button.

CAPACITY	70%
INIT	10/01
EST CHGS	11

**Note:** If a Smart Battery is not powering your radio:

SMART BATT  
DATA NOT  
AVAILABLE

- 2 Press  to exit.

## Antenna

For information regarding other available antennas, see page 71.


### Attach the Antenna

With the radio off, turn the antenna clockwise to attach it.



### Remove the Antenna


With the radio off, turn the antenna counter-clockwise to remove it.

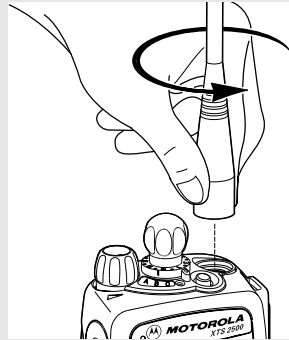

## Belt Clip

### Attach the Belt Clip


- 1 Align the grooves of the belt clip with those of the battery.

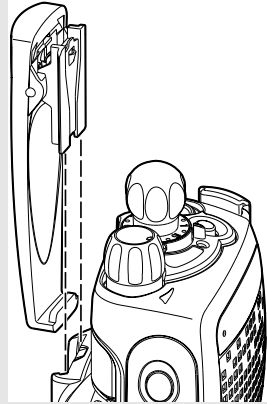

- 2 Press the belt clip downward until you clear a “click.”
- 

### Remove the Belt Clip

- 1 Use a flat-bladed object to press the belt clip tab away from the battery.

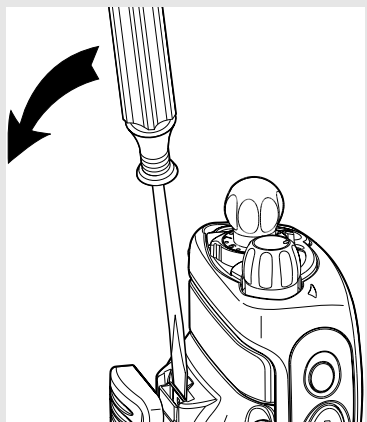

- 2 Slide the belt clip upward to remove it.
-


## Universal Connector Cover

The universal connector cover is located on the antenna side of the radio. It is used to connect certain accessories to the radio.

**Note:** To prevent damage to the connector, shield it with the connector cover when not in use.


### Remove the Connector Cover

- 1 Insert a flat-bladed screwdriver into the area between the bottom of the cover and the slot below the connector.
- 2 Hold the top of the cover with your thumb while you pry the bottom of the cover away from the radio with the screwdriver.

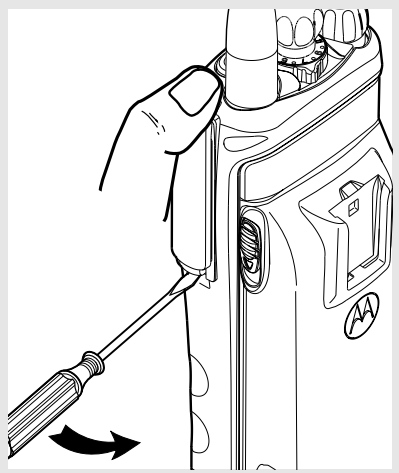

### Attach the Connector Cover

- 1 Insert the hooked end of the cover into the top of the connector. Press downward on the cover's top to seat it into the slot.
- 2 Press the cover's lower tab below the connector until it snaps in place.

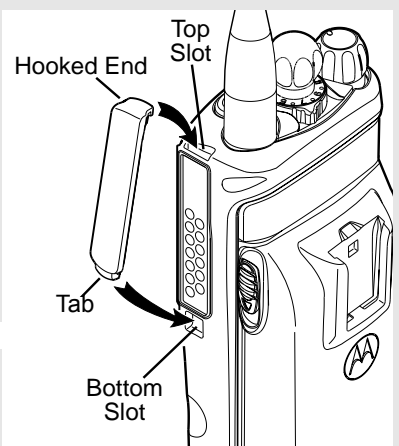




## Remote Speaker Microphone Adapter

The Remote Speaker Microphone (RSM) adapter is located on the back of the radio, just above the battery. **It must be used to connect the RSM accessories (see page 73) to the radio.** If the RSM is not used, the adapter should be removed.

### Remove the Adapter


Lift the larger side (below the antenna port) of the adapter away from the radio using your finger.

If you cannot easily remove the adapter with your finger, use a small, flat bladed screwdriver to pry the larger end side of the adapter away from the radio.

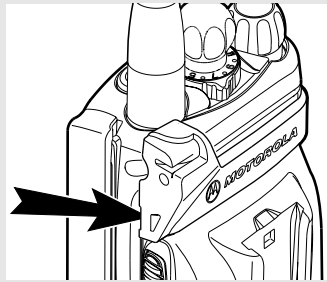


### Attach the Adapter

- 1 With the Motorola side of the adapter facing out, snap the smaller end of the adapter into place in the shroud indent, below the **On/Off Volume Control Knob**.

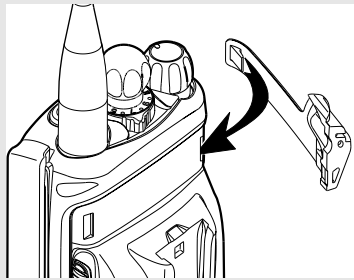


- 2 Snap the larger end of the adapter into place in the shroud indent, below the antenna port.

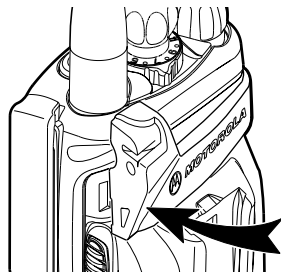



## Radio On and Off

### Turn the Radio On

Turn the **On/Off/Volume Control knob** clockwise.

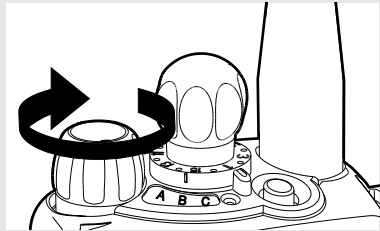


- If the power-up test is successful, you will briefly see **Self Test** and then the home display.
- If the power-up test is unsuccessful, you will see **ERROR XX/YY**. (XX/YY is an alphanumeric code.) Turn off the radio, check the battery, and turn the radio on again. If the radio continues to fail the power-up test, record the **ERROR XX/YY** code and contact a qualified service technician.



### Turn the Radio Off

Turn the **On/Off/Volume Control knob** counterclockwise until it clicks.

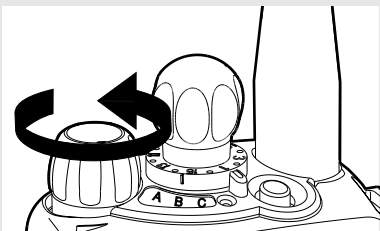

## Zones and Channels

A zone is a grouping of channels. A channel is a group of radio characteristics, such as transmit/receive frequency pairs.




Before you use your radio to receive or send messages, you should select the zone and channel.

### Select a Zone


#### Use the Menu

- 1 Press  to find ZONE.





- 2 Press , , or  directly below ZONE. The current zone (in this case, POL) flashes and the channel name (DISP NW), does not flash.



- 3 Press  to find the zone you want. For example, FIRE.



- 4 Press  to confirm the displayed zone and channel.




#### OR

Press the **PTT** button to transmit on the displayed zone/channel.


### Use the Preprogrammed Zone Switch

- 1 If a control on your radio has been preprogrammed as the **Zone** Switch, move the **Zone** Switch to the position for the zone you want.



**Note:** If the zone you selected is unprogrammed, repeat this step.



- 2 Press  to confirm the displayed zone and channel.

---

### Select a Channel

Consult an authorized service technician for the right choice between the following methods.

#### Method 1: Use the Preprogrammed Channel Selector




After the zone you want is displayed, turn the preprogrammed **Channel Selector** switch to the desired channel.



**Method 2: Use the Menu**


- 1 Press  to find CHAN.



- 2 Press , , or  directly below CHAN.


The display shows the current channel name (in this case, DISP NW) flashing and the zone (POL), not flashing.



- 3 Press  to find the channel name you want.


**Note:** If the channel you selected is unprogrammed, repeat step 3.



- 4 Press  to confirm the displayed zone and channel.

**OR**

press the **PTT** button to transmit on the displayed zone/channel.




## Receive / Transmit

Radio users who switch from analog to digital radios often assume that the lack of static on a digital channel is an indication that the radio is not working properly. This is not the case. Digital technology quiets the transmission by removing the “noise” from the signal and allowing only the clear voice or data information to be heard.

This section emphasizes the importance of knowing how to monitor a channel for traffic before keying-up to send a transmission.

### Without Using the Volume Set and Monitor Buttons


- 1 Turn the radio on and select the desired zone and channel.
- 2 Listen for a transmission.
- 3 Adjust the **Volume Control** knob if necessary.

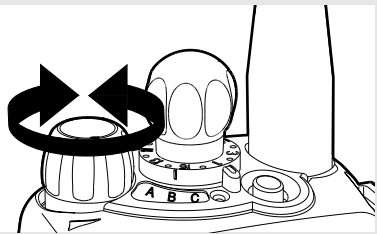

- 4 Press and hold the **PTT** button to transmit. The LED lights RED while transmitting.
- 5 Release the **PTT** button to receive (listen).

## Use Preprogrammed Volume Set Button

- 1 Turn the radio on and select the desired zone and channel. See **Turn the Radio On**, page 20, and **Zones and Channels**, page 21.
- 2 Press and hold the **Volume Set** button to hear the volume set tone.
- 3 Release the **Volume Set** button.
- 4 Adjust the **Volume Control** Knob if necessary.

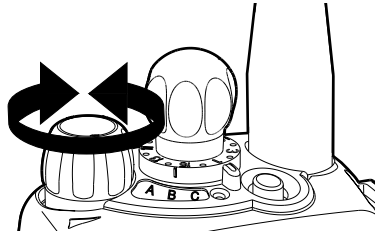


- 5 Press and hold the **PTT** button to transmit. LED lights RED while transmitting.
  - 6 Release **PTT** button to receive (listen).
-

## Use the Preprogrammed Monitor Button

- 1 Turn the radio on and select the desired zone and channel.
- 2 Press the Monitor button and listen for activity. (See the following **Conventional Mode Operation.**)



- 3 Adjust the **Volume Control Knob** if necessary.

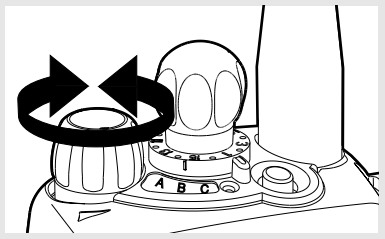

- 4 Press and hold the **PTT** button to transmit. The LED lights RED while transmitting.
- 5 Release the **PTT** button to receive (listen).



## Conventional Mode Operation

Your radio may be programmed to receive Private-Line® (PL) calls.

- 1 Momentarily press the **Monitor** button to listen for activity. The Carrier Squelch indicator is displayed.



- 2 Press and hold the **Monitor** button to set continuous monitor operation. (The duration of the button press is programmable.)

- 3 Press the **Monitor** button again, or the **PTT** button, to return to the original squelch setting.

**Note:** If you try to transmit on a receive-only channel, you will hear an invalid tone until you release the **PTT** button.

## Notes

# Common Radio Features

---

## Selectable Power Level

This feature lets you select the power level at which your radio will transmit. The radio will always turn on to the preprogrammed default setting.




- Select **LOW** for a shorter transmitting distance and to conserve power.
- Select **HIGH** for a longer transmitting distance.

## Use the Menu


1 Press  to find PWR.




PWR

2 Press , , or  directly below PWR.

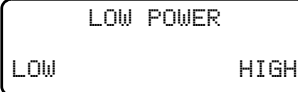


The display shows the current power level (**LOW** or **HIGH**).

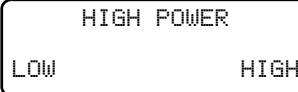


LOW POWER  
LOW HIGH



HIGH POWER  
LOW HIGH

3 Press , , or  directly below the desired power level (**LOW** or **HIGH**).

- The new transmit power level is saved.
- The radio returns to the Home display.


**Note:** To exit at anytime, press  or the **PTT** button. The default setting returns when you turn the radio off and on.

## Using the Preprogrammed TX Power Level Switch

- 1 Rotate the **TX Power Level** switch. The power level is set to low.



- 2 Rotate the **TX Power Level** switch again. The power level is set to high.



---

## Conventional Squelch Options

### Analog Squelch

Tone Private Line (PL), Digital Private-Line (DPL), and carrier squelch can be available (preprogrammed) per channel.

When in...	this condition occurs:
Carrier squelch (🔇)	You hear all traffic on a channel.
PL, DPL	The radio responds only to your messages.

## Digital Squelch

One or more of the following options may be programmed in your radio. Consult your service technician for more information.


This option...	will allow you to hear:
Digital Carrier-Operated Squelch (COS)	any digital traffic.
Normal Squelch	any digital traffic having the correct Network access code.
Selective Switch	any digital traffic having the correct Network access code and correct talkgroup.

## PL Defeat

With this feature, you can override any coded squelch (DPL, PL, or network ID) that might be programmed to a channel.

Place the preprogrammed **PL Defeat** switch in the **PL Defeat** position. You can now hear any activity on the channel. The radio is muted if no activity is present.

When this feature is active, the Carrier Squelch status indicator (🔇) will be displayed.



## Time-out Timer

The time-out timer turns off your radio's transmitter. The timer is set for 60 seconds at the factory, but it can be programmed from 0 to 7.75 minutes (465 seconds) by a qualified radio technician.

- |          |  |   |
|----------|--|---|
| <b>1</b> | Hold down the <b>PTT</b> longer than the programmed time. You will hear a short, low-pitched warning tone, the transmission is cut-off, and the LED will go out until you release the <b>PTT</b> . | <ul style="list-style-type: none"><li>• Short warning tone</li><li>• Transmission is cut-off</li><li>• LED goes out</li></ul> |
| <b>2</b> | Release the <b>PTT</b> button.   | <ul style="list-style-type: none"><li>• LED re-lights</li><li>• Timer resets</li></ul>  |
| <b>3</b> | Press the <b>PTT</b> to re-transmit. Time-out timer restarts.  | <ul style="list-style-type: none"><li>• Timer restarts</li><li>• RED LED</li></ul>  |

## Emergency

If the top (orange) button is programmed to send an emergency signal, then this signal overrides any other communications over the selected channel.

Your radio can be programmed for the following:

- Emergency Alarm
- Emergency Alarm with Emergency Call, or
- Silent Emergency Alarm
- Emergency Call.

Consult a qualified radio technician for emergency programming of your radio.

### Send an Emergency Alarm

An Emergency Alarm will send a data transmission to the dispatcher, identifying the radio sending the emergency.

- 1 With your radio turned on, press the **Emergency** button. The current zone/channel is displayed alternately with **EMERGENCY**, the LED lights **RED**, and a short, medium-pitched tone sounds.

EMERGENCY

- RED LED
- Short Tone

If the selected channel does not support emergency, the display shows **NO EMERGENCY**. Select a channel that does show **EMERGENCY**.

NO EMERGENCY

**Note:** To exit emergency at any time, press and hold the Emergency button for about a second.

2 When you receive the dispatcher's acknowledgment, you see **ACK RECEIVED**, four tones sound, the alarm ends, and the radio exits the emergency mode.

ACK RECEIVED

- Four tones
- Alarm ends
- Radio exits emergency

If no acknowledgement is received, you see **NO ACKNOWLEDG**, the alarm ends, and the radio exits the emergency mode.

NO ACKNOWLEDG

**Note:** For Emergency Alarm with Emergency Call: The radio enters the Emergency Call state either after it receives the dispatcher's acknowledgment, or if you press the **PTT** button while in Emergency Alarm. Go to step 2 below: "Send an Emergency Call."

---

## Send an Emergency Call

An Emergency Call will send a type of dispatch giving your radio priority access to channels.

The radio operates in the normal dispatch manner while in Emergency Call, except, if enabled, it will return to one of the following:

Using this operation:	means you will talk...
1. Tactical/Non-Revert	on the channel you selected before you entered the emergency state.
2. Non-Tactical/Revert	on a preprogrammed emergency channel. The emergency alarm is sent to this same channel.



- 1 With your radio turned on, press the **Emergency** button. The current zone/channel is displayed alternately with **EMERGENCY**, and a short, medium-pitched tone sounds.

EMERGENCY

- Short tone

**Note:** To exit emergency at any time, press and hold the **Emergency** button for about a second.

- 2 Press and hold the **PTT** button and announce the emergency into the microphone to send the Emergency call.
- 3 Release the **PTT** button to end the call.
- 4 Exit the Emergency State by pressing the **Emergency** button again for about one second (the time may be changed by a qualified technician). The radio returns to normal operation.

---

## Send a Silent Emergency Alarm

- 1 With your radio turned on, press the **Emergency** button if your radio is programmed for this use.
  - Display does not change
  - LED does not light
  - No tones

The display does not change, the LED does not light, and no tones sound.

**Note:** To exit emergency at any time, press and hold the **Emergency** button for about a second.

**2** The silent emergency state continues until you press and hold the **Emergency** button for about a second to exit the emergency state.

- Press and hold the **Emergency** button

**OR**

Press and release the **PTT** button to exit silent emergency. The silent alarm is cancelled without an exit tone, and you can begin transmitting voice calls.

**OR**

- Press and release the **PTT** button

- 
- Note:**
- For ALL Emergency signals: You can change channels while in Emergency operation if the new channel is also programmed for Emergency. The emergency alarm or call continues on the new channel.
  - If the new channel is NOT programmed for Emergency, you see **NO EMERGENCY**, and hear an invalid tone until you exit the Emergency state or change to a channel programmed for emergency.

## Emergency Keep-Alive

If the radio is in the Emergency state, with Emergency Keep-Alive enabled, you cannot turn off the radio by using the **On/Off Control** knob.

With Keep-Alive, the radio will only exit the Emergency state using one of the ways mentioned in the previous sections (Emergency Alarm, Silent Emergency Alarm, or Emergency Call).


## Lists

You can use lists to store frequently used numbers and associate them with names.




There are four list types:



- Call
- Page
- Phone
- Scan

### View a List




1 Press  arrow to find VIEW.




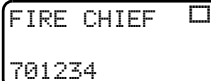
2 Press , , or  directly below VIEW.



3 Press  or  to see the names of the available lists.



4 Press , , or  directly below the desired list to view it.

The first list member is displayed.  indicates the view mode.



5 Press  or  to view other list members.

6 Press  to exit.

## Scan List Empty

If the scan list has no members, `EMPTY LIST` is displayed.



`EMPTY LIST`

`EMPTY LIST` can be changed by turning scan off, or a qualified technician adds members to the scan list.

## Scan

The scan feature allows you to monitor traffic on different channels by scanning a preprogrammed list of channels. Your radio can have up to 20 different scan lists. These lists must be preprogrammed by a qualified technician.

You can view the scan list assigned to the currently selected channel the same way you would view other lists. See “View a List” on page 37.

### Turn Scan On and Off


#### Using the Menu





- 1 Press  to find SCAN.




- 2 Press , , or  directly below SCAN.

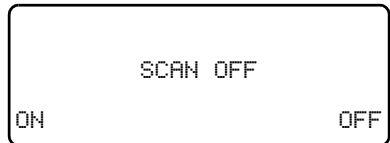
The current scan state is displayed.



- 3 Press , , or  directly below ON or OFF. When scan is on, the scan status symbol () is displayed.

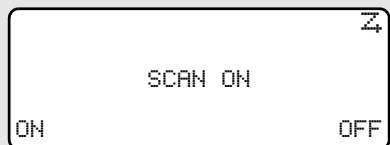

#### OR

To exit the display menu without changing the scan state, press  or PTT.

### Use the Preprogrammed Scan On/Off Switch

Place the **Scan On/Off** switch in the Scan On or Scan Off position. The current scan state is displayed. When scan is on, the scan status symbol (🔍) is displayed.



**Note:** To exit the display menu without changing the scan state, press (🏠) or **PTT**.

## Delete a Nuisance Channel

When the radio scans to a channel that you do not wish to hear (nuisance channel), you can temporarily delete the channel from the scan list.

- 1** When the radio is locked onto the channel to be deleted, press the preprogrammed **Nuisance Delete** button.  
Repeat this step to delete more channels.

**Note:** You cannot delete priority channels or the designated transmit channel.

- 2** The radio continues scanning the remaining channels in the list. To resume scanning the deleted channel, change channels or turn scan off and then back on again.
-

## Conventional Scan Only

### Make a Dynamic Priority Change

While the radio is scanning, the dynamic priority change feature lets you *temporarily* change any channel in a scan list (except the priority-one channel) to the priority-two channel. The replaced priority-two channel becomes a non-priority channel. This change remains in effect until scan is turned off, then scanning reverts back to the preprogrammed state.

- 1 When the radio is locked onto the channel to be designated as priority-two, press the preprogrammed **Dynamic Priority** button.

**Note:** The priority-one channel cannot be changed to priority-two.

- 2 The radio continues scanning the remaining channels in the list. To resume scanning the preprogrammed priority-two channel, you must leave and re-enter scan operation.
-




## Telephone Calls (Trunking Only)

Use your radio to make and receive standard phone calls. A landline phone can be used to call a radio, or a radio can be used to call a landline phone.

### Answer a Phone Call

#### Use the Preprogrammed Call Response Button


- 1 When a phone call is received, you hear a telephone-type ringing, the LED flashes GREEN, the call-received symbol (☎) flashes, and PHONE CALL is displayed.



- 2 Press the **Call Response** button within 20 seconds after the call indicators begin.

- Telephone ringing
- Flashing GREEN LED

- 3 Press and hold the **PTT** button to talk; release it to listen.

- 4 Press  to hang up and return to the home display.

## Make a Phone Call

### Use the Menu

- 1 Press  to find PHON.

PHON






- 2 Press , , or  directly below PHON.

The last phone number dialed is displayed.

555-1234

LIST

- Note:** If you wish to call this number, go to Step 4. Otherwise, continue to Step 3.

- 3 Press  or  to scroll to the phone number you want in the list. Press , , or  directly under LNUM to go to the last phone number dialed.

POLICE

555-8523

LNUM

- 4 Press and release the **PTT** button to start the phone call to the displayed number.

### OR


Press the preprogrammed **Quick Access** button to start the phone call to the displayed number.

---


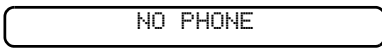
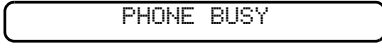

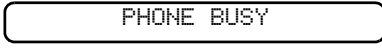


**5** Press and hold the **PTT** button to talk, release it to listen.

**OR**

If your call is not answered, go to “Phone Call Display and alert Prompts” on page 45.

**6** Press  to hang up and return to the home display.

### Phone Call Display and Alert Prompts

<ul style="list-style-type: none"> <li>When you press the <b>PTT</b> button and the phone system is not available, a long tone sounds. Press  to hang up. Radio returns to the home display.</li> </ul>	
<ul style="list-style-type: none"> <li>When a channel is not available, a busy tone sounds. The radio will automatically connect when a channel opens.</li> </ul>	
<ul style="list-style-type: none"> <li>When the phone system is busy, a long tone sounds. Try your call later. Press  to hang up. Radio returns to the home display.</li> </ul>	
<ul style="list-style-type: none"> <li>The system does not acknowledge your call. Press  to hang up. Radio returns to the home display.</li> </ul>	

- Notes:**
- A high-pitched tone, generated when you release the **PTT** button, indicates to the landline party that he or she can begin talking.
  - You have the option of sending additional digits (overdial), such as an extension number, or credit card or PIN numbers, to the phone system. If the radio is programmed for live overdial, every digit entered after the call is connected is sent to the phone system.
  - If the radio is programmed for buffered overdial, the digits pressed are entered into memory and then sent when the **PTT** button is pressed. Press the **PTT** to send either digits or voice, but not both at the same time.

## Private Calls (Trunking Only)

These one-to-one calls between two radios are not heard by others in the current talkgroup. The calling radio automatically verifies the receiving radio is active on the system and can display the caller's ID.

### Answer a Private Call

Use the Preprogrammed Call Response Button.

- 1 When a private call is received, you hear two alert tones, the LED flashes GREEN, the call-received symbol (☎) flashes, and CALL RECEIVD is displayed.



- Two tones
- Flashing GREEN LED


- 2 Press the **Call Response** button within 20 seconds.

If the caller's name is in the call list, it will be displayed.

#### OR

If the name is not in the call list, the caller's ID number is displayed.

- 3 Press and hold the **PTT** button to talk; release it to listen.




- 4 Press  or the **Call Response** button to hang up.

## Make a Private Call

### Use the Menu



- 1 Press  to find CALL.

CALL

- 2 Press , , or  directly below CALL.

You see the last transmitted or received ID number

FIRE CHIEF  
ID: 701234  
LIST

- 3 Press  or  to scroll to the ID number you want in the list.

**Note:** Press LNUM to go to the last number dialed.

FIRE CHIEF  
ID: 701234  
LNUM

- 4 Press the **PTT** button to start the Private Call to the displayed number.

### OR

Press the preprogrammed **Quick Access** button to start the private call to the displayed number.

- 5 The called ID is momentarily displayed, followed by PLEASE WAIT. The called ID is displayed once connected.

PLEASE WAIT

If the system does not acknowledge the call, NO ACKNOWLEDG is displayed.

NO ACKNOWLEDG

If the target radio does not respond before the time out, NO ANSWER is displayed.

NO ANSWER

---

## Call Alert Paging

Call Alert allows your radio to work like a pager. Even if other users are away from their radios, or if they are unable to hear their radios, you can still send them a Call Alert page. With Call Alert paging, you can also verify if a radio is active on the system.

### Answer a Call Alert Page

- 1 When a Call Alert Page is received, you hear four repeating alert tones, the LED flashes GREEN, the call-received symbol (☎) flashes, and PAGE RECEIVED is displayed.



- 2 Press and hold the **PTT** button to talk, release it to listen.




- Four repeating alert tones
- Flashing GREEN LED

## Make a Call Alert

### Use the Menu

- 1 Press  to find PAGE.

PAGE

- 2 Press , , or  directly below PAGE.

You see the last transmitted or received ID number.

FIRE CHIEF  
ID: 701234  
LIST

- Note:** Press LNUM to go to the last number dialed.

FIRE CHIEF  
ID: 701234  
LNUM

- 3 Press the **PTT** button to start the Call Alert Page to the displayed number.

### OR


Press the preprogrammed **Quick Access** button to start the page to the displayed number.

PLEASE WAIT is displayed. The home display appears once you are connected.

PLEASE WAIT

If the system does not acknowledge the call, NO ACKNOWLEDG is displayed. The radio exits Call Alert and returns to normal operation.

NO ACKNOWLEDG

- 4 Press  to hang up and return to the home display.






## Conventional Talkgroup Calls (Conventional Operation Only)

Talkgroup Call lets you define a group of conventional system users so that they can share the use of a conventional channel.



### Select a Talkgroup




- 1 Press  to find TGRP.




- 2 Press , , or  directly below TGRP.

The last user-selected-and-stored talkgroup, and its available softkeys, are displayed.

- 3 Press  or  to find the talkgroup you want.

- 4 Press , , or  directly below PSET (to select the preset or programmed talkgroup), or below SEL (to save the talkgroup and return to the home display).



- 5 To exit, press  or the **PTT** button, or turn the **16-Position Select** knob.

## Repeater or Direct Operation

Also known as TALKAROUND operation, DIRECT lets you bypass the repeater and connect directly to another radio. The transmit and receive frequencies are the same.

REPEATER operation increases the radio's range by connecting with other radios through a repeater. Transmit and receive frequencies are different.




### Select Repeater or Direct Operation


#### Use the Menu

- 1 Press  to find DIR.



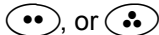



DIR

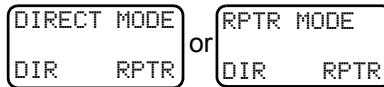- 2 Press , , or  directly below DIR. The current operation is momentarily displayed.




DIRECT MODE or RPTR MODE  
DIR RPTR DIR RPTR

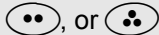- 3 Press , , or  directly below DIR or RPTR. If DIR is selected, the display shows  and DIRECT MODE.



  
DIRECT MODE

- 4 Press  to exit display menu without changing the current operation.
-

# Special Radio Features

---

## PTT ID

### Receive



This feature allows you to see the radio ID number of the radio you are currently receiving. This ID can be a maximum of eight characters and can be viewed by both the receiving radio and the dispatcher.

### Transmit

Your radio's ID number is automatically sent every time the **PTT** button is pressed. This is a per-channel feature. For digital voice transmissions, your radio's ID is sent continuously during the voice message.

## View Your Radio's ID Number




### Use the Menu

- 1 Press  or  to find CALL or PAGE.

CALL

or

PAGE

- 2 Press , , or  directly below CALL or PAGE.

- 3 Press .

MY ID:

701111

### Use the Preprogrammed Call or Page Button

- 1 Press the **Call** or **Page** button.

- 2 Press .

MY ID:

701111

## Dynamic Regrouping (Trunking Only)

The dynamic regrouping feature lets the dispatcher temporarily reassign selected radios to a single special channel so they can communicate with each other. This feature is typically used during special operations and is enabled by a qualified radio technician. You will not notice whether your radio has this feature enabled until a dynamic regrouping command is sent by the dispatcher.

**Note:** If you try to access a zone or channel that has been reserved by the dispatcher as a dynamically regrouped mode for other users, you will hear an invalid tone.

When your radio is dynamically regrouped, it automatically switches to the dynamically regrouped channel. You see the dynamically regrouped channel's name, and hear a "gurgle" tone.

Press the **PTT** button to talk; release it to listen.

When the dispatcher cancels dynamic regrouping, the radio automatically returns to the zone and channel that you were using before the radio was dynamically regrouped.

## Reprogram Request (ASTRO 25 Trunking Only)

This feature lets you notify the dispatcher that you want a new dynamic regrouping assignment.

### Use the Menu

1 Press  to find RPGM.

RPGM

2 Press , , or  directly below RPGM.


REPRGRM RQST

The reprogram request is sent to the dispatcher.

**3** If you hear *one beep*

- Press the **PTT** button to send the reprogram request again.

**OR**


- Press  to cancel and return to the home display.

**OR**

If you hear *five beeps*, the reprogram request was acknowledged by the dispatcher. Your radio returns to the home display.

**OR**

If the dispatcher does not acknowledge the reprogram request within six seconds, you see **NO ACKNOWLEDG** and hear a low-pitched alert tone.

Try again or press .

- One beep

- Five beeps

**NO ACKNOWLEDG**

- An alert tone

### Use the Preprogrammed Reprogram Request Button


- 1** Press the **Reprogram Request** button. You see **REPRGRM RQST**.

The reprogram request is sent to the dispatcher.

**REPRGRM RQST**

- 2** If you hear *one beep*
- One beep
  - Press the **PTT** button to send the reprogram request again

**OR**

- Press  to hang up and return to the home display.

**OR**


- If you hear *five beeps*, the reprogram request was acknowledged by the dispatcher. Your radio returns to the home display.
- Five beeps

**OR**

If the dispatcher does not acknowledge the reprogram request within six seconds, you see `NO ACKNOWLEDG` and hear a low-pitched alert tone.

NO ACKNOWLEDG

- An alert tone

Try again or press .

---

## Select Enable / Disable

The dispatcher can classify regrouped radios into either of two categories: Select Enabled or Select Disabled.

- Select-enabled radios are free to change to any available channel, including the dynamic-regrouping channel, once the user has selected the dynamic-regrouping position.
- Select-disabled radios cannot change channels while dynamically regrouped. The dispatcher has forced the radio to remain on the dynamic-regrouping channel.

The Scan or Private Call feature cannot be selected while your radio is Select Disabled.

## Trunking System Controls

### Failsoft

The failsoft system ensures continuous radio communications during a trunked system failure. If a trunking system fails completely, the radio goes into failsoft operation and automatically switches to its failsoft channel.

During failsoft operation:

Your radio transmits and receives in conventional operation on a predetermined frequency.



FAILSOFT

You hear a medium-pitched tone every 10 seconds.

- Medium-pitched tone

When the trunking system returns to normal operation, your radio automatically leaves failsoft operation and returns to trunked operation.

### Out-of-Range

If you go out of the range of the system, and can no longer lock onto a control channel:

The display shows **OUT OF RANGE** and the currently selected zone/channel combination, and/or you hear a low-pitched tone.



OUT OF RANGE

**AND/OR**

Your radio remains in this out-of-range condition until it locks onto a control channel, or it locks onto a failsoft channel, or it is turned off.

- Low-pitched tone
- Locks onto a control channel, or
- Locks onto a failsoft channel, or
- Turned off.



## Site Lock

This feature allows your radio to lock onto a specific site and not roam among wide-area talkgroup sites. This feature should be used with caution, since it inhibits roaming to another site in a wide-area system.

### Lock or Unlock a Site

#### Use the Menu

- 1 Press or to find SITE.

SITE

- 2 Press , , or directly below SITE.

The current lock state is displayed.

SITE UNLOCKED  
LOCK UNLK

OR

SITE LOCKED  
LOCK UNLK

- 3 Press , , or directly below LOCK or UNLK.

- The new site-lock state is saved.
- Your radio returns to the home display.

#### Use the Preprogrammed Site Lock/Unlock Button

- 1 Press the **Site Lock/Unlock** button.

The current lock state is momentarily displayed.

SITE LOCKED

OR

SITE UNLOCKED

- 2 Press and hold the **Site Lock/Unlock** button until you see the desired lock state.

SITE LOCKED

OR

SITE UNLOCKED

## Site Trunking


If the zone dispatcher loses communication with any site, that site reverts to “site trunking.” The display shows `SITE TRUNKING` and the currently selected zone/channel combination. When this occurs, you can communicate only with other radios within your trunking site.


## Site View and Change

You can view the ID number of the current site or force your radio to change to a new one.

### View the Current Site

Momentarily press the preprogrammed **Site Search** button.

The display shows either the number of the current site and its corresponding Received Signal Strength Indicator (RSSI) symbol () (See Table 3 on page 6).



### OR

If the radio is scanning for a new site, the display momentarily shows `SCANNING SITE`.



### Change the Current Site

Press and hold down the preprogrammed **Site Search** button to manually force the change to a new site.

You hear a tone, and the display shows `SCANNING SITE` while the radio scans for a new site.

The radio returns to the home display when it finds a new site.

- Tone



## Time and Date

Using this special feature, you may program the time and date as you might with other electronic devices. The clock display is enabled by a qualified radio technician.

- The default time setting is a 12-hour clock.
- If a 24-hour clock is selected, AM/PM selection is not available.
- The default setting for the domestic date shows MDY.



12HR 00:00AM






MDY 00/00/00


## Edit Time and Date

- 1 Press  to find CLCK.






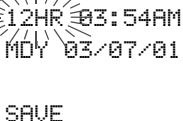
CLCK

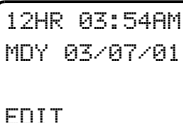- 2 Press , , or  directly below CLCK. The current setting is displayed.






12HR 03:54AM  
MDY 03/07/01  
EDIT

- 3 Press , , or  directly below EDIT. The first item flashes.




12HR 03:54AM  
MDY 03/07/01  
SAVE


- 4 Press  or  to change the selected item.

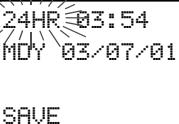




24HR 03:54  
MDY 03/07/01  
SAVE


**Note:** Press  at any time to return to the home display without saving your changes.


**OR**

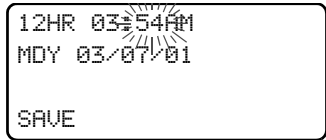
Press  one or more times to move to an item you wish to change.



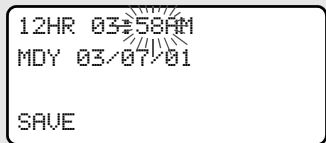


**5** Press  or  to change the selected item.



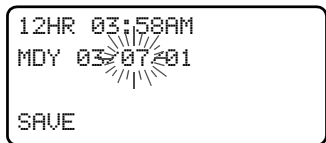


**6** Press  one or more times to move to an item in the date field.

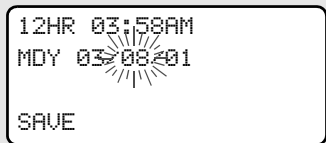

**7** Press  or  to change the selected item.



**8** When you have made all your changes, press , , or  directly below SAVE to save your changes and return to the Home display.

**Note:** If a call arrives while the radio is in the clock-setting menu, the radio exits clock setting, your changes are lost, and the call information is displayed.

# Notes

# Helpful Tips

---

## Radio Care

### Cleaning

To clean the external surfaces of your radio:

- 1 Combine one teaspoon of mild dishwashing detergent to one gallon of water (0.5% solution).
- 2 Apply the solution sparingly with a stiff, non-metallic, short-bristled brush, making sure excess detergent does not get entrapped near the connectors, controls or crevices. Dry the radio thoroughly with a soft, lint-free cloth.
- 3 Clean battery contacts with a lint-free cloth to remove dirt or grease.



Caution

**Do not use solvents to clean your radio. Spirits may permanently damage the radio housing.**

**Do not submerge the radio in the detergent solution.**

### Handling

- Do not pound, drop, or throw the radio. Never carry the radio by the antenna.
- Avoid subjecting the radio to an excess of liquids.
- Avoid subjecting the radio to corrosives, solvents or spirits.
- Do not disassemble the radio.
- Keep the accessory-connector cover in place until ready to use the connector. Replace the cover immediately once the accessory has been disconnected.

### Service

Proper repair and maintenance procedures will assure efficient operation and long life for this product. A Motorola maintenance agreement will provide expert service to keep this and all other communication equipment in perfect operating condition. A nationwide service organization is provided by Motorola to support

maintenance services. Through its maintenance and installation program, Motorola makes available the finest service to those desiring reliable, continuous communications on a contract basis. For a contract service agreement, please contact your nearest Motorola service or sales representative, or an authorized Motorola dealer.

Express Service Plus (ESP) is an optional extended service coverage plan, which provides for the repair of this product for a period of three years from the date of shipment from the factory, or the date of delivery if purchased from an authorized Motorola two-way radio dealer. For more information about ESP, contact the Motorola Radio Support Center, 2204 Galvin Drive, Elgin, IL 60123, 1-800-227-6772.

## **Battery**

### **Battery Life**

Battery life is determined by several factors. Among the more critical are the regular overcharge of batteries and the average depth of discharge with each cycle. Typically, the greater the overcharge and the deeper the average discharge, the fewer cycles a battery will last. For example, a battery which is overcharged and discharges 100% several times a day, will last fewer cycles than a battery that receives less of an overcharge and is discharged to 50% per day. Further, a battery which receives minimal overcharging and averages only 25% discharge, will last even longer.

### **Charging the Battery**

Motorola batteries are designed specifically to be used with a Motorola charger and vice-versa. Charging in non-Motorola equipment may lead to battery damage and void the battery warranty. Motorola-authorized battery chargers may not charge batteries other than the ones listed on page 71.

The battery should be at about 77°F (25°C) (room temperature), whenever possible. Charging a cold battery (below 50° F [10°C]) may result in leakage of electrolyte and ultimately in failure of the battery. Charging a hot battery (above 95°F [35°C]) results in reduced discharge capacity, affecting the performance of the radio. Motorola



rapid-rate battery chargers contain a temperature-sensing circuit to ensure that batteries are charged within the temperature limits stated above.


### **Battery Charge Status**

Your radio can indicate your battery's charge status by the following:

#### ***LED and Sounds***

- you see the LED flash red when the PTT Button is pressed indicating low battery
- you hear a low-battery “chirp” (short, high-pitched tone)





#### ***Conventional Fuel Gauge Symbol***

A flashing fuel gauge symbol () is displayed only when the battery voltage drops to low level. In this case, replace the battery with a fully charged one.

#### ***Smart Fuel Gauge Symbol***

**Note:** Smart battery will be available at a future date.

Consult the Smart Battery manual. All conditions must be met for a battery to be classified as a “Smart Battery.” When your radio has a Smart Battery installed, the fuel gauge symbol is always displayed.

<b><i>Gauge shows:</i></b>	<b><i>if the battery's charge is:</i></b>
	71% to 100% full
	41% to 70%
	11% to 40%
	10% or less (at 10%, the gauge begins flashing)

Replace the battery with a fully charged one when the fuel gauge shows the lowest level.

## **Battery Recycling and Disposal**

Nickel-cadmium (NiCd) rechargeable batteries can be recycled. However, recycling facilities may not be available in all areas. Under various U.S. state laws and the laws of several other countries, NiCd batteries must be recycled and cannot be disposed of in landfills or incinerators. Contact your local waste management agency for specific requirements and information in your area.


Motorola fully endorses and encourages the recycling of NiCd batteries. In the U.S. and Canada, Motorola participates in the nationwide Rechargeable Battery Recycling Corporation (RBRC) program for NiCd battery collection and recycling. Many retailers and dealers participate in this program.

For the location of the drop-off facility closest to you, access RBRC's Internet web site at [www.rbrc.com](http://www.rbrc.com) or call 1-800-8-BATTERY. This internet site and telephone number also provide other useful information concerning recycling options for consumers, businesses, and governmental agencies.

## Antenna

### Radio Operating Frequencies

Before installing the antenna, make sure it matches your radio's operating frequency. Antennas are frequency sensitive and are color coded according to their frequency range. The color code indicator is located in the center of the antenna's base.

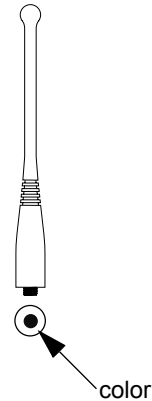

The following antenna types are compatible with your radio:

Antenna Type	Approx. Length		Insulator Color Code	Frequency Range (MHz)	Antenna Kit No.
	in.	mm			
VHF whip	8	203	RED	136–174	NAD6563
VHF helical	7.6	193	YELLOW	136–150.8	NAD6566
VHF helical	7	178	BLACK	150.8–162	NAD6567
VHF helical	6.5	165	BLUE	162–174	NAD6568
UHF helical	3.3	83	RED	380–435	NAE6546
UHF helical	3.1	78	GREEN	435–470	NAE6547
UHF helical	2.8	71	BLACK	470–520	NAE6548
UHF whip, wideband	5.2	133	GRAY	380–520	NAE6549

## Helpful Tips

---

Antenna Type	Approx. Length		Insulator Color Code	Frequency Range (MHz)	Antenna Kit No.
	in.	mm			
800 MHz whip, halfwave	7	178	RED	806–870	NAF5037
800 MHz dipole	8	200	RED	806–870	NAF5039
800 MHz stubby, quarterwave	3.4	86	WHITE	806–870	NAF5042
700/800 MHz whip	7	178	GREEN	764–870	NAF5080

# Accessories

---

Motorola provides the following approved accessories to improve the productivity of your XTS 2500 portable two-way radio.

For a list of Motorola-approved antennas, batteries, and other accessories, visit the following web site which lists approved accessories: <http://www.motorola.com/cgiss/index.shtml>

## Antennas

NAD6563	VHF whip (136–174 MHz)
NAD6566	VHF (136–150.8 MHz)
NAD6567	VHF (150.8–162 MHz)
NAD6568	VHF (162–174 MHz)
NAE6546	UHF (380–435 MHz)
NAE6547	UHF (435–470 MHz)
NAE6548	UHF (470–520 MHz)
NAE6549	UHF whip (380–520 MHz)
NAF5037	800 MHz whip, halfwave (806–870 MHz)
NAF5039	800 MHz dipole (806–870 MHz)
NAF5042	800 MHz stubby, quarterwave (806–870 MHz)
NAF5080	700/800 MHz whip (764–870 MHz)

## Batteries

NTN9815	NiCd high-capacity
NTN9816	NiCd high-capacity, Factory Mutual Intrinsically Safe
NTN9857	NiMH ultra-high-capacity, Factory Mutual Intrinsically Safe
NTN9858	NiMH ultra-high-capacity

## Carry Accessories

### Belt Clips

HLN6853	Belt clip, 2 1/4 inch
---------	-----------------------

### Body-Worn

NNTN4115	Carrying case, leather with 3-in. swivel belt loop and T-strap
NNTN4116	Carrying case, leather with 2.5-in. swivel belt loop and T-strap
NNTN4117	Carrying case, leather with 3-in. belt loop and T-strap
NLN6349	Shoulder strap for carrying radio
NTN5243	Shoulder strap for carrying radio
TDN9675	Wrist strap for carrying radio

## Chargers

NLN7967	Wall-mount kit for multi-unit charger
NLN7968	Rack-mount kit for multi-unit charger
NTN1168	Single-unit dual rate, rapid charger 120V
NTN1169	Single-unit dual rate, rapid charger 220V (2-prong Euro plug)
NTN1170	Single-unit dual rate, rapid charger 240V (3-prong UK plug)
NTN1177	Multi-unit, dual rate, rapid charger 110V
NTN1178	Multi-unit, dual rate, rapid charger 240V (3-prong UK plug)
NTN1179	Multi-unit, rapid charger 240V (UK 13 MAP Plug)

NTN1667	Tri-chemistry, 110V
NTN1668	Tri-Chemistry, 220V Single Unit Charger (2 Prong Euro Plug)
NTN1669	Tri-chemistry, 230V
NTN1873	IMPRES™ rapid charger 110V single-unit
NTN1874	IMPRES™ rapid charger 220V single-unit
NTN1875	IMPRES™ rapid charger 240V single-unit
NTN4796	Multi-unit, tri-chemistry, rapid rate, 110V
NTN7209	Single-unit dual rate, rapid charger w/o cord

### Enhanced and Multi-Unit Line Cords

NTN7373	110V interchangeable line
NTN7374	220V interchangeable line (2-prong Euro plug)
NTN7375	240V interchangeable line (3-prong UK plug)

### Microphones, Remote Speaker

NMN6191	Remote speaker mic, noise-canceling (includes 6.0-ft coiled cord assembly, 3.5-mm earjack, swivel clip, quick disconnect)
NMN6193	Remote speaker mic
NNTN4285	Remote speaker mic adapter
ZMN6031	Speaker mic, 3-piece
ZMN6032	Speaker mic, 2-piece
ZMN6038	Speaker mic, 2-piece, extra loud
ZMN6039	Speaker mic, 3-piece, extra loud

## Surveillance Accessories

### Adapters and Adapter Cable

BDN6673	Headset adapter cable (for use with BDN6635 and BDN6645)
BDN6676	Jedi adapter
NTN8613	Surveillance accessory adapter

### CommPort<sup>®</sup> Integrated Microphone/Receivers

NTN1624	CommPort with palm PTT
NTN1625	CommPort ear mic with PTT for noise levels up to 100 dB (requires BDN6676 adapter)
NTN1663	CommPort ear mic with ring PTT for noise levels up to 100 dB (requires BDN6676 adapter)
NTN1736	CommPort ear mic with snap-on side PTT for noise levels up to 100 dB (requires BDN6676 adapter)

### Earpieces

BDN6641	Ear mic, high noise level up to 105 dB, grey (must order BDN6671 interface module)
BDN6664	Earpiece with standard earphone, beige
BDN6665	Earpiece with extra-loud earphone (exceeds OSHA limits), beige
BDN6666	Earpiece with volume control, beige
BDN6667	Earpiece, mic and PTT combined, beige
BDN6668	Earpiece, mic and PTT separate, beige
BDN6669	Earpiece, mic and PTT combined, with extra-loud earphone (exceeds OSHA limits), beige



BDN6670	Earpiece, mic and PTT separate with extra-loud earphone (exceeds OSHA limits), beige
BDN6677	Ear mic, standard, noise up to 95 dB (must order BDN6671 interface module), black
BDN6678	Ear mic, standard, noise up to 95 dB (must order BDN6671 interface module), beige
BDN6719	Earpad, with 3.5mm threaded plug
BDN6726	Earpiece with standard earphone, black
BDN6727	Earpiece with extra-loud earphone (exceeds OSHA limits), black
BDN6728	Earpiece with volume control, black
BDN6729	Earpiece, mic and PTT combined, black
BDN6730	Earpiece, mic and PTT separate, black
BDN6731	Earpiece, mic and PTT combined, with extra-loud earphone (exceeds OSHA limits), black
BDN6732	Earpiece, mic and PTT separate, with extra-loud earphone (exceeds OSHA limits), black
BDN6780	Earbud, single with mic and PTT combined, beige
BDN6781	Earbud, single, receive only, black

## Headsets and Headset Accessories

BDN6635	Heavy-duty VOX headset with noise-canceling boom mic (requires BDN6673 adapter)
BDN6636	Heavy-duty VOX headset with throat mic (requires BDN6673)
BDN6645	Noise-canceling boom mic headset with PTT on earcup
NMN1020	Safety helmet headset (requires BDN6676 adapter)
NMN6245	Light-weight headset
NMN6246	Ultralite headset with boom mic

NMN6258	Over-the-head headset with in-line PTT
NMN6259	Medium-weight, dual headset with NC mic
RMN4049	Jedi “TEMCO” temple transducer

## Radio Interface Modules for Ear Microphones

BDN6671	Push-to-talk (PTT) and voice-activated (VOX) interface module (for use with BDN6641, BDN6677 and BDN6678)
BDN6708	PTT interface module (for use with BDN6641, BDN6677 and BDN6678)

## Switches

0180300E83	Remote PTT body switch
NTN7660	Tilt / man down switch

# Appendix: Maritime Radio Use in the VHF Frequency Range

---

## Special Channel Assignments

### Emergency Channel

If you are in imminent and grave danger at sea and require emergency assistance, use **VHF Channel 16** to send a distress call to nearby vessels and the United States Coast Guard. Transmit the following information, in this order:

- 1 "MAYDAY, MAYDAY, MAYDAY."
- 2 "THIS IS \_\_\_\_\_, CALL SIGN \_\_\_\_\_."  
*State the name of the vessel in distress 3 times, followed by the call sign or other identification of the vessel, stated 3 times.*
- 3 Repeat "MAYDAY" and the name of the vessel.
- 4 "WE ARE LOCATED AT \_\_\_\_\_."  
*State the position of the vessel in distress, using any information that will help responders to locate you, e.g.:*
  - latitude and longitude
  - bearing (state whether you are using true or magnetic north)
  - distance to a well-known landmark
  - vessel course, speed or destination
- 5 State the nature of the distress.
- 6 Specify what kind of assistance you need.
- 7 State the number of persons on board and the number needing medical attention, if any.
- 8 Mention any other information that would be helpful to responders, such as type of vessel, vessel length and/or tonnage, hull color, etc.
- 9 "OVER."
- 10 Wait for a response.
- 11 If you do not receive an immediate response, remain by the radio and repeat the transmission at intervals until you receive a response. Be prepared to follow any instructions given to you.

## Non-Commercial Call Channel

For non-commercial transmissions, such as fishing reports, rendezvous arrangements, repair scheduling, or berthing information, use **VHF Channel 9**.

## Operating Frequency Requirements

A radio designated for shipboard use must comply with Federal Communications Commission Rule Part 80 as follows:

- on ships subject to Part II of Title III of the Communications Act, the radio must be capable of operating on the 156.800 MHz frequency
- on ships subject to the Safety Convention, the radio must be capable of operating:
  - in the simplex mode on the ship station transmitting frequencies specified in the 156.025–157.425 MHz frequency band, and
  - in the semiduplex mode on the two frequency channels specified in the table below.

**Note:** Simplex channels 3, 21, 23, 61, 64, 81, 82, and 83 **cannot be lawfully used** by the general public in US waters.

Additional information about operating requirements in the Maritime Services can be obtained from the full text of FCC Rule Part 80 and from the US Coast Guard.

**Table A-1: VHF Marine Channel List**

Channel Number	Frequency (MHz)	
	Transmit	Receive
1	156.050	160.650
2	156.100	160.700
*	156.150	160.750
4	156.200	160.800
5	156.250	160.850
6	156.300	–
7	156.350	160.950

**Table A-1: VHF Marine Channel List (Continued)**

Channel Number	Frequency (MHz)	
	Transmit	Receive
8	156.400	–
9	156.450	156.450
10	156.500	156.500
11	156.550	156.550
12	156.600	156.600
13**	156.650	156.650
14	156.700	156.700
15**	156.750	156.750
16	156.800	156.800
17**	156.850	156.850
18	156.900	161.500
19	156.950	161.550
20	157.000	161.600
*	157.050	161.650
22	157.100	161.700
*	157.150	161.750
24	157.200	161.800
25	157.250	161.850
26	157.300	161.900
27	157.350	161.950
28	157.400	162.000
60	156.025	160.625
*	156.075	160.675
62	156.125	160.725
63	156.175	160.775
*	156.225	160.825
65	156.275	160.875
66	156.325	160.925

**Table A-1: VHF Marine Channel List (Continued)**

Channel Number	Frequency (MHz)	
	Transmit	Receive
67**	156.375	156.375
68	156.425	156.425
69	156.475	156.475
71	156.575	156.575
72	156.625	–
73	156.675	156.675
74	156.725	156.725
75	***	***
76	***	***
77**	156.875	–
78	156.925	161.525
79	156.975	161.575
80	157.025	161.625
*	157.075	161.675
*	157.125	161.725
*	157.175	161.775
84	157.225	161.825
85	157.275	161.875
86	157.325	161.925
87	157.375	161.975
88	157.425	162.025

\* Simplex channels 3, 21, 23, 61, 64, 81, 82, and 83 **cannot be lawfully used** by the general public in US waters.

\*\* Low power (1 W) only

\*\*\* Guard band




**Note:** A – in the Receive column indicates that the channel is transmit only.

# Glossary

---

This is a list of specialized terms used in this manual.

<b>ACK</b>	Acknowledgment of communication.
<b>Active Channel</b>	A channel that has traffic on it.
<b>Analog Signal</b>	An RF signal that has a continuous nature rather than a pulsed or discrete nature.
<b>ASTRO 25 Trunking</b>	Motorola standard for wireless digital trunked communications.
<b>ASTRO Conventional</b>	Motorola standard for wireless analog or digital conventional communications.
<b>Call Alert</b>	Privately page an individual by sending an audible tone.
<b>Carrier Squelch</b>	Feature that responds to the presence of an RF carrier by opening or unmuting (turning on) a receiver's audio circuit. A squelch circuit silences the radio when no signal is being received so that the user does not have to listen to noise.
<b>Central Controller</b>	A software controlled, computer-driven device that receives and generates data for the trunked radios assigned to it. It monitors and directs the operations of the trunked repeaters.
<b>Channel</b>	A group of characteristics such as transmit/receive frequency pairs, radio parameters, and encryption encoding.
<b>Control Channel</b>	In a trunking system, one of the channels that is used to provide a continuous, two-way/data communications path between the central controller and all radios on the system.
<b>Conventional</b>	Typically refers to radio-to-radio communications, sometimes through a repeater. (See Trunking.)

<b>Cursor</b>	A visual tracking marker (a blinking line) that indicates a location on the display.
<b>Deadlock</b>	Displayed by the radio after three failed attempts to unlock the radio. The radio must be powered off and on prior to another attempt.
<b>Digital Private Line (DPL)</b>	A type of coded squelch using data bursts. Similar to PL except a digital code is used instead of a tone.
<b>Digital Signal</b>	An RF signal that has a pulsed, or discrete nature, rather than a continuous nature.
<b>Dispatcher</b>	An individual who has radio system management duties.
<b>Dynamic Regrouping</b>	A feature that allows the dispatcher to temporarily reassign selected radios to a single special channel so they can communicate with each other.
<b>Failsoft</b>	A feature that allows communications to take place even though the central controller has failed. Each trunked repeater in the system will transmit a data word informing every radio that the system has gone into failsoft.
<b>FCC</b>	Federal Communications Commission.
<b>Hang Up</b>	Disconnect.
<b>Home Display</b>	The first display information after the radio completes its self test.
<b>LCD</b>	Liquid Crystal Display.
<b>LED</b>	Light-emitting diode.
<b>Menu Entry</b>	A software-activated feature shown at the bottom of the display — selection of these features is controlled by the  ,  , and  buttons.



<b>Monitor</b>	Check channel activity by pressing the Monitor button. If the channel is clear, you will hear static. If the channel is in use, you will hear conversation. It also serves as a way to check the volume level of the radio, as the radio will “open the squelch” when pressing the monitor button.
<b>Network Access Code</b>	Network Access Code (NAC) operates on digital channels to reduce voice channel interference between adjacent systems and sites.
<b>NiCd</b>	Nickel Cadmium.
<b>NiMH</b>	Nickel Metal Hydride.
<b>Non-tactical/Revert</b>	The user will talk on a preprogrammed emergency channel. The emergency alarm is sent on this same channel.
<b>Page</b>	A one-way alert, with audio and/or display messages.
<b>Personality</b>	A set of unique features specific to a radio.
<b>Preprogrammed</b>	A feature that has been assigned in advance by a qualified technician.
<b>Private (Conversation) Call</b>	Allows you to have a private conversation with another radio user in the group.
<b>Private Line (PL)</b>	A sub-audible tone that is transmitted such that only receivers decoding this tone will hear the message.
<b>Programmable</b>	A radio control that can have a radio feature assigned to it.
<b>PTT</b>	Push-To-Talk — the <b>PTT</b> button engages the transmitter and puts the radio in transmit (send) operation when pressed.

<b>Radio Frequency (RF)</b>	The part of the general frequency spectrum between the audio and infrared light regions (about 10 kHz to 10,000,000 MHz).
<b>Repeater</b>	A conventional radio feature, where you talk through a receive/transmit facility (repeater), that re-transmits received signals in order to improve communications range and coverage.
<b>Selective Switch</b>	Any digital P25 traffic having the correct Network Access Code and the correct talkgroup.
<b>Squelch</b>	Special electronic circuitry added to the receiver of a radio which reduces, or squelches, unwanted signals before they are heard in the speaker.
<b>Standby</b>	An operating condition whereby the radio's speaker is muted but still continues to receive data.
<b>Tactical/Non-revert</b>	The user will talk on the channel that was selected before the radio entered the emergency state.
<b>Talkaround</b>	Bypass a repeater and talk directly to another unit for easy local unit-to-unit communications.
<b>Talkgroup</b>	An organization of radio users who communicate with each other.
<b>Trunking</b>	The automatic sharing of communications paths between a large number of users. (See Conventional.)
<b>Zone</b>	A grouping of channels.

# Commercial Warranty

---

## Limited Warranty

### MOTOROLA COMMUNICATION PRODUCTS

#### I. WHAT THIS WARRANTY COVERS AND FOR HOW LONG:

MOTOROLA INC. (“MOTOROLA”) warrants the MOTOROLA manufactured Communication Products listed below (“Product”) against defects in material and workmanship under normal use and service for a period of time from the date of purchase as scheduled below:

ASTRO XTS 2500 Portable Units	One (1) Year
Product Accessories	One (1) Year

Motorola, at its option, will at no charge either repair the Product (with new or reconditioned parts), replace it (with a new or reconditioned Product), or refund the purchase price of the Product during the warranty period provided it is returned in accordance with the terms of this warranty. Replaced parts or boards are warranted for the balance of the original applicable warranty period. All replaced parts of Product shall become the property of MOTOROLA.

This express limited warranty is extended by MOTOROLA to the original end user purchaser only and is not assignable or transferable to any other party. This is the complete warranty for the Product manufactured by MOTOROLA. MOTOROLA assumes no obligations or liability for additions or modifications to this warranty unless made in writing and signed by an officer of MOTOROLA. Unless made in a separate agreement between MOTOROLA and the original end user purchaser, MOTOROLA does not warrant the installation, maintenance or service of the Product.

MOTOROLA cannot be responsible in any way for any ancillary equipment not furnished by MOTOROLA which is attached to or used in connection with the Product, or for operation of the Product with any ancillary equipment, and all such equipment is expressly excluded from this warranty. Because each system which may use

the Product is unique, MOTOROLA disclaims liability for range, coverage, or operation of the system as a whole under this warranty.

## **II. GENERAL PROVISIONS:**

This warranty sets forth the full extent of MOTOROLA'S responsibilities regarding the Product. Repair, replacement or refund of the purchase price, at MOTOROLA's option, is the exclusive remedy. THIS WARRANTY IS GIVEN IN LIEU OF ALL OTHER EXPRESS WARRANTIES. IMPLIED WARRANTIES, INCLUDING WITHOUT LIMITATION, IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, ARE LIMITED TO THE DURATION OF THIS LIMITED WARRANTY. IN NO EVENT SHALL MOTOROLA BE LIABLE FOR DAMAGES IN EXCESS OF THE PURCHASE PRICE OF THE PRODUCT, FOR ANY LOSS OF USE, LOSS OF TIME, INCONVENIENCE, COMMERCIAL LOSS, LOST PROFITS OR SAVINGS OR OTHER INCIDENTAL, SPECIAL OR CONSEQUENTIAL DAMAGES ARISING OUT OF THE USE OR INABILITY TO USE SUCH PRODUCT, TO THE FULL EXTENT SUCH MAY BE DISCLAIMED BY LAW.

## **III. STATE LAW RIGHTS:**

SOME STATES DO NOT ALLOW THE EXCLUSION OR LIMITATION OF INCIDENTAL OR CONSEQUENTIAL DAMAGES OR LIMITATION ON HOW LONG AN IMPLIED WARRANTY LASTS, SO THE ABOVE LIMITATION OR EXCLUSIONS MAY NOT APPLY.

This warranty gives specific legal rights, and there may be other rights which may vary from state to state.

## **IV. HOW TO GET WARRANTY SERVICE:**

You must provide proof of purchase (bearing the date of purchase and Product item serial number) in order to receive warranty service and, also, deliver or send the Product item, transportation and insurance prepaid, to an authorized warranty service location. Warranty service will be provided by Motorola through one of its authorized warranty service locations. If you first contact the company

which sold you the Product, it can facilitate your obtaining warranty service. You can also call Motorola at 1-888-567-7347 US/Canada.

**V. WHAT THIS WARRANTY DOES NOT COVER:**

- A) Defects or damage resulting from use of the Product in other than its normal and customary manner.
- B) Defects or damage from misuse, accident, water, or neglect.
- C) Defects or damage from improper testing, operation, maintenance, installation, alteration, modification, or adjustment.
- D) Breakage or damage to antennas unless caused directly by defects in material workmanship.
- E) A Product subjected to unauthorized Product modifications, disassemblies or repairs (including, without limitation, the addition to the Product of non-Motorola supplied equipment) which adversely affect performance of the Product or interfere with Motorola's normal warranty inspection and testing of the Product to verify any warranty claim.
- F) Product which has had the serial number removed or made illegible.
- G) Rechargeable batteries if:
  - any of the seals on the battery enclosure of cells are broken or show evidence of tampering.
  - the damage or defect is caused by charging or using the battery in equipment or service other than the Product for which it is specified.
- H) Freight costs to the repair depot.
- I) A Product which, due to illegal or unauthorized alteration of the software/firmware in the Product, does not function in accordance with MOTOROLA's published specifications or the FCC type acceptance labeling in effect for the Product at

the time the Product was initially distributed from MOTOROLA.

- J) Scratches or other cosmetic damage to Product surfaces that does not affect the operation of the Product.
- K) Normal and customary wear and tear.

**VI. PATENT AND SOFTWARE PROVISIONS:**

MOTOROLA will defend, at its own expense, any suit brought against the end user purchaser to the extent that it is based on a claim that the Product or parts infringe a United States patent, and MOTOROLA will pay those costs and damages finally awarded against the end user purchaser in any such suit which are attributable to any such claim, but such defense and payments are conditioned on the following:

- A) that MOTOROLA will be notified promptly in writing by such purchaser of any notice of such claim;
- B) that MOTOROLA will have sole control of the defense of such suit and all negotiations for its settlement or compromise; and
- C) should the Product or parts become, or in MOTOROLA's opinion be likely to become, the subject of a claim of infringement of a United States patent, that such purchaser will permit MOTOROLA, at its option and expense, either to procure for such purchaser the right to continue using the Product or parts or to replace or modify the same so that it becomes non-infringing or to grant such purchaser a credit for the Product or parts as depreciated and accept its return. The depreciation will be an equal amount per year over the lifetime of the Product or parts as established by MOTOROLA.

MOTOROLA will have no liability with respect to any claim of patent infringement which is based upon the combination of the Product or parts furnished hereunder with software, apparatus or devices not furnished by MOTOROLA, nor will MOTOROLA have any liability for

the use of ancillary equipment or software not furnished by MOTOROLA which is attached to or used in connection with the Product. The foregoing states the entire liability of MOTOROLA with respect to infringement of patents by the Product or any parts thereof.

Laws in the United States and other countries preserve for MOTOROLA certain exclusive rights for copyrighted MOTOROLA software such as the exclusive rights to reproduce in copies and distribute copies of such Motorola software. MOTOROLA software may be used in only the Product in which the software was originally embodied and such software in such Product may not be replaced, copied, distributed, modified in any way, or used to produce any derivative thereof. No other use including, without limitation, alteration, modification, reproduction, distribution, or reverse engineering of such MOTOROLA software or exercise of rights in such MOTOROLA software is permitted. No license is granted by implication, estoppel or otherwise under MOTOROLA patent rights or copyrights.

**VII. GOVERNING LAW:**

This Warranty is governed by the laws of the State of Illinois, USA.

## Notes



# Index

---

## A

accessories	
antennas	71
batteries	71
belt clips	72
body-worn	72
carry accessories	72
chargers	72
Commport integrated microphone/ receivers	74
earpieces	74
headsets	75
microphones, remote speaker	73
radio interface modules	76
switches	76
alert tones	10
answer a phone call	43
answer a private call	47
antenna	
attach the antenna	16
radio operating frequencies	69
remove the antenna	16
antennas	71
app button	3

## B

batteries	71
battery	13
attach the battery	14
battery charge status	67
recycling and disposal	68
remove the battery	14
smart battery condition	15
battery charger	13
belt clip	
attach the belt clip	17
remove the belt clip	17

## C

call alert	
make a call alert	50
carry accessories	
belt clips	72

body-worn	72
channel	
select a channel	22
chargers	72
enhanced and multi-unit line cords	73
conventional fuel gauge symbol	67
conventional mode operation	27
conventional squelch options	30

## D

display	5
display status symbols	6
dynamic priority change	42
dynamic regrouping	55

## E

emergency	33
emergency keep-alive	36

## F

failsoft	58
four-way navigation button	9

## G

glossary	81
----------	----

## H

home button	9
-------------	---

## L

LED indicators	9
list	
scan list empty	38
view a list	37

## M

make a call alert	50
make a phone call	44
make a private call	48
menu entry (softkey)	7
menu select buttons	7
menu selection features	8

microphones, remote speaker .....73  
 monitor button .....26

**N**

notations used in this manual ..... 1

**O**

out-of-range .....58

**P**

phone call display and alert prompts  
 45  
 physical features of the radio .....3  
 PL defeat .....31  
 private call  
     make a private call .....48  
 programmable features .....4  
 PTT ID .....53

**R**

radio care  
     cleaning .....65  
     handling .....65  
 radio ID number .....53  
 receive and transmit .....24  
 remote speaker microphone adapter  
 19  
 repeater or direct operation  
     select repeater or direct .....52  
 reprogram request .....55  
     use the preprogrammed reprogram  
     request button .....56  
 request a new dynamic regrouping  
     using the menu .....55

**S**

scan .....39  
     delete a nuisance channel .....41  
     turn scan on and off .....39  
 scan (conventional only)  
     make a dynamic priority change ..  
     42  
 scan list empty .....38

select  
     enable / disable ..... 57  
 select a channel .....22  
 select a zone .....21  
 send a silent emergency alarm ... 35  
 send an emergency alarm ..... 33  
 send an emergency call ..... 34  
 service ..... 65  
 site lock .....59  
 site trunking .....60  
     change the current site .....61  
     view the current site .....60  
 smart battery condition ..... 15  
 smart fuel gauge symbol ..... 67  
 squelch  
     analog squelch ..... 30  
     digital squelch ..... 31  
 surveillance accessories ..... 74  
     Commport integrated microphone/  
     receivers ..... 74  
     earpieces ..... 74  
     headsets and headset accessories  
     .....75  
     radio interface modules for ear  
     microphones ..... 76  
 switches ..... 76

**T**

talkgroup  
     select talkgroup ..... 51  
 time and date ..... 62  
     edit time and date ..... 62  
 time-out timer ..... 32  
 transmitter power level  
     using the preprogrammed TX  
     power level switch ..... 30  
 Trunking System Controls ..... 58  
 turn the radio off ..... 20  
 turn the radio on ..... 20

**U**

universal connector  
     attach the cover ..... 18

remove the cover ..... 18

**V**

view a list .....37

**W**

warranty .....85

**Z**

zone

select a zone .....21

zone switch .....22







Motorola, Inc.  
8000 West Sunrise Boulevard  
Ft. Lauderdale, FL 33322

MOTOROLA, the Stylized M Logo, ASTRO and CommPort are registered in the U.S. Patent and Trademark Office. All other product or service names are the property of their respective owners.

© Motorola, Inc. 2004.

All rights reserved. Printed in U.S.A.



**6881094C05-D**